
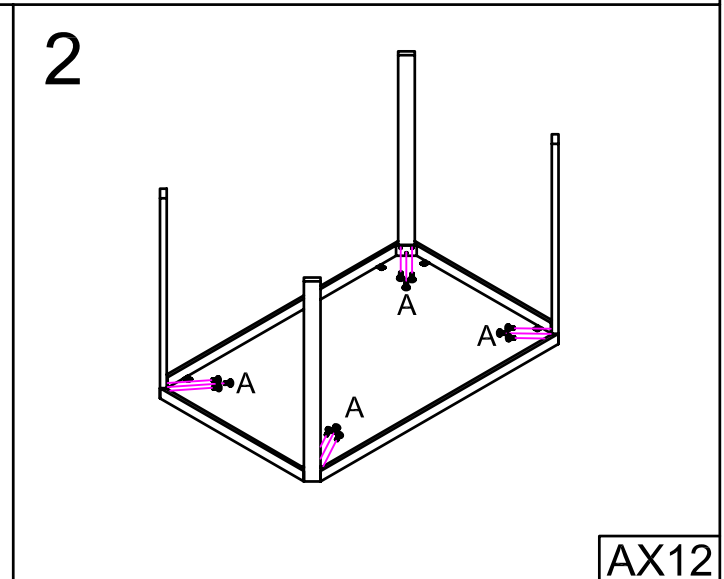
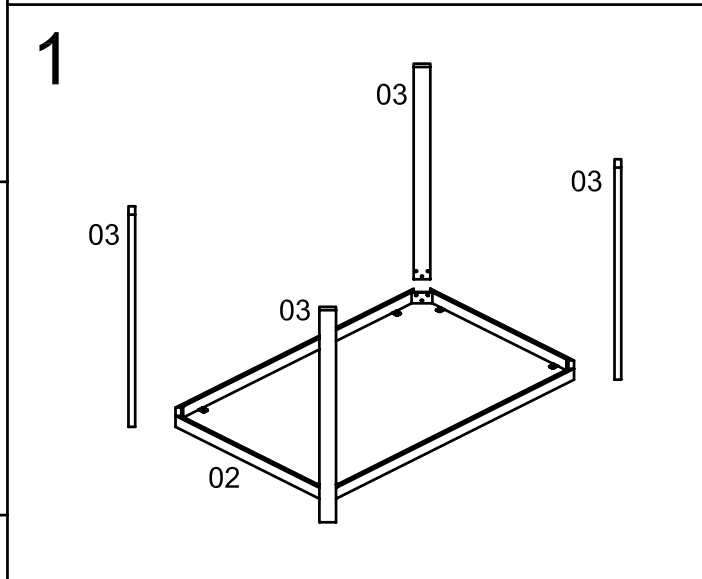
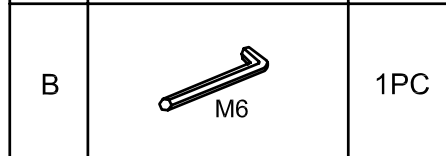
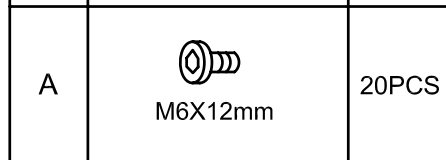
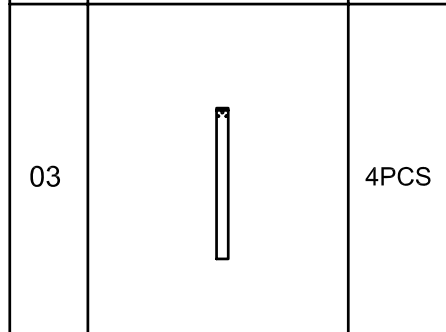
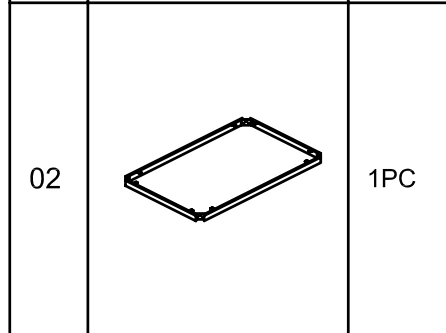


POLDIMAR BVBA


REF 830/4 LEEDS

ASSEMBLE INSTRUCTION


*** DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED ***

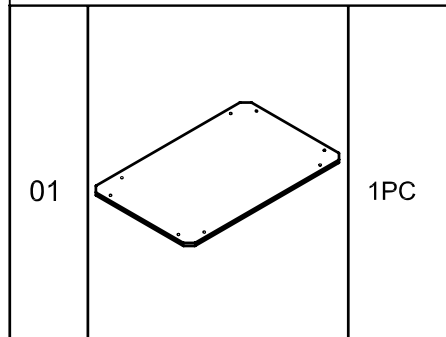

AX12

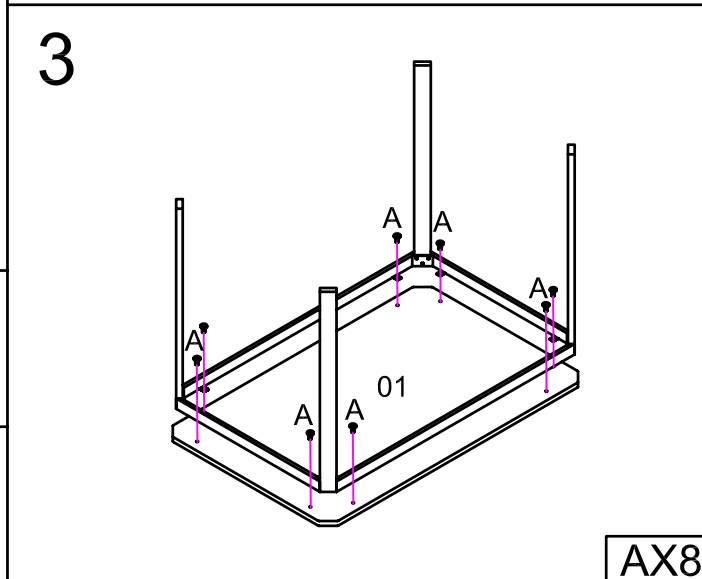

AX8

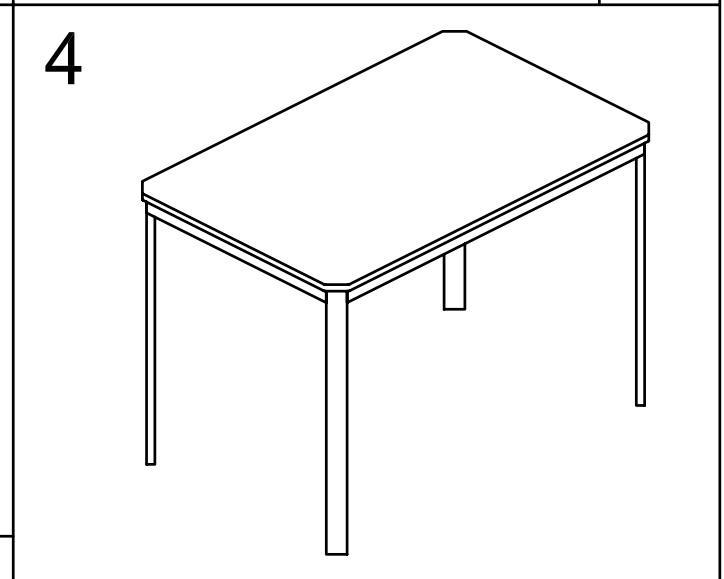









POLDIMAR BVBA


REF 830/4 LEEDS

ASSEMBLE INSTRUCTION

*** DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED ***


04		1PCX4
05		1PCX4
06		1PCX4
07		1PCX4
08		1PCX4
A	 M6X12mm	6PCSX4
B	 M6	1PC
C	 M6X40mm	4PCSX4

1

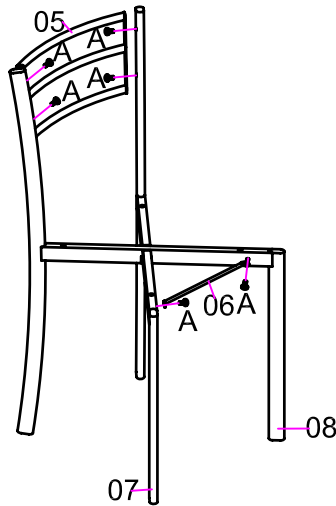


AX6

2

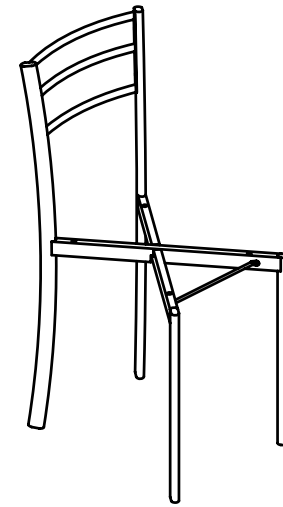

3

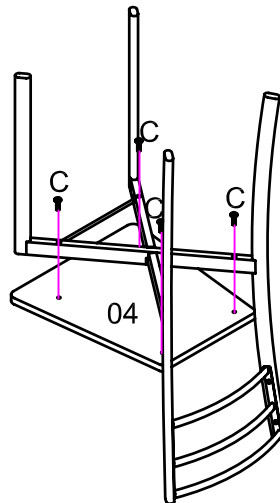

CX4

4

