


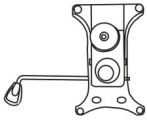
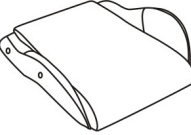




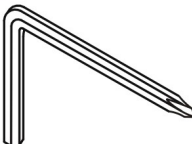

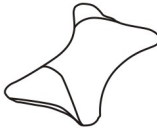




Installation instructions


9805

Accessories list

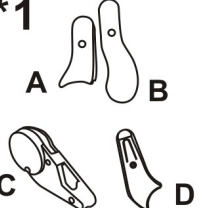
A*5 	B*1 	C*1 	D*1 	E*1 	F*1 	G*2 
H*1 	I*1 	J*1 	L*6 	M*1 	N*1 	O*1 

Installation instructions


1

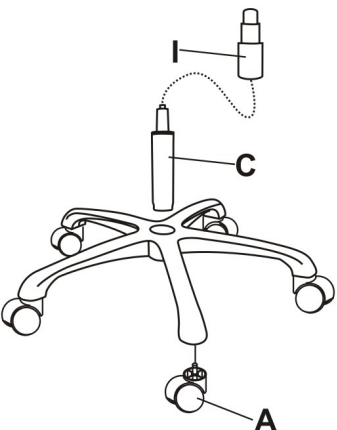


2

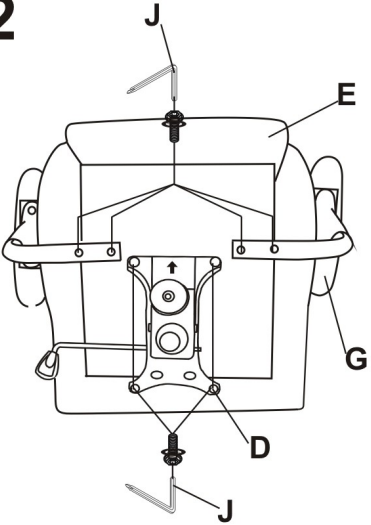

3

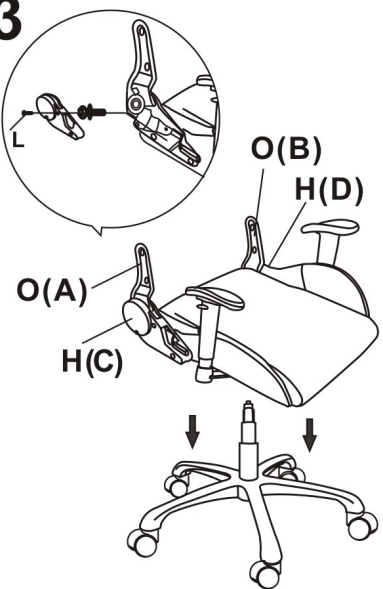

4

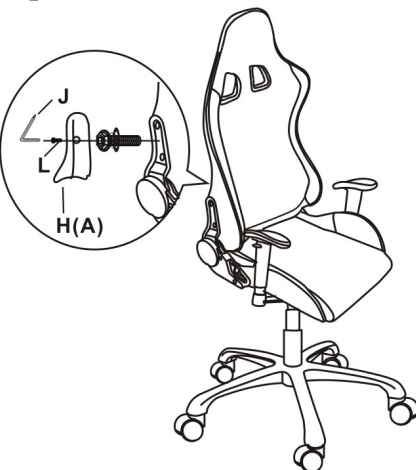

Install back, first screw the upper screws of two sides to fix the back, then screw the rest two.

5

